
100i40 TIMBER FLOOR/DECK


For 100ARi40, 100PSi40, 100TRi40

When 100i40 is running parrallel to joist/bearer

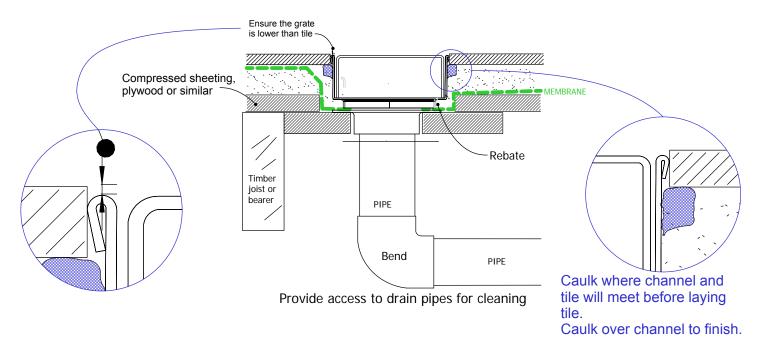



When 100i40 is running perpendicular to joist/bearer

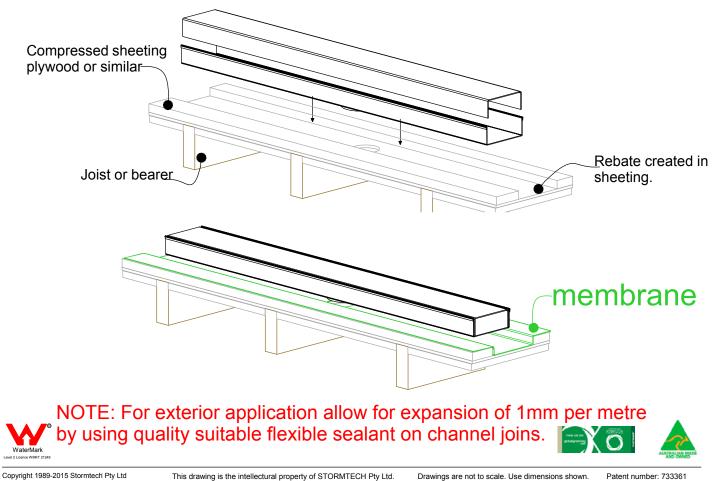

e info@stormtech.com.au, w www.stormtech.com.au