


This design conforms with Plumbing Code AS/NZS 3500. The loose fitting spigot provides an outlet for moisture in the waterproof rebate and allows the Channel to be removed for safe keeping until tiling.

The spigot should drain over 1 litre per second. A bathroom tap delivers 0.3 l/s approx.

Install the P.trap & fittings as per the Plumbing Code of Australia AS3500.


STORMTECH 100TIF

NOTE, these dimensions are the internal sizes for the frame

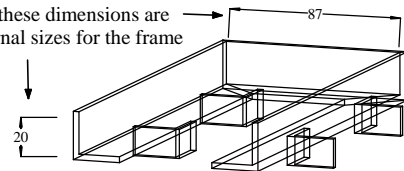

FRAME

NOTE, these dimensions are overall of the tray

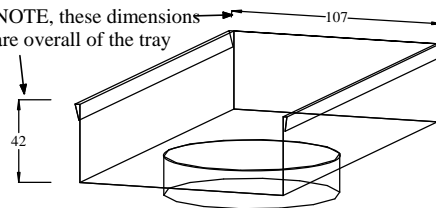

TRAY

Installation of the tiles is generally best left till floor tiling is completed.