
100G20 Threshold installation suggestion

For 100AR20, 100PS20, 100TR20, 100MND20, 100AA20.

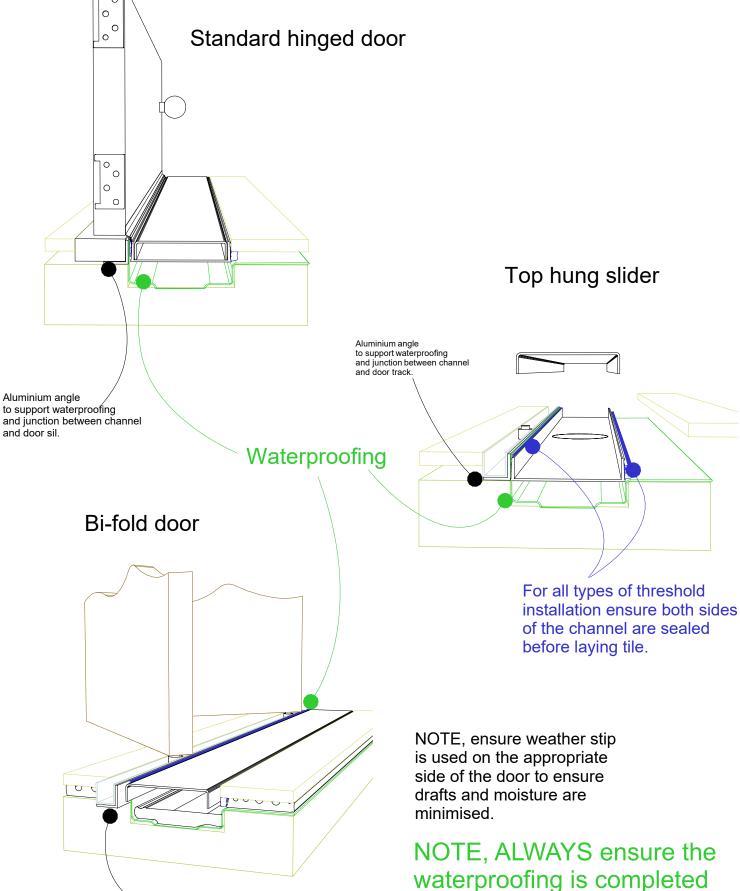





before laying the Stormtech.





Aluminium angle to support waterproofing and junction between channel

and door track.