


# 65TDi Linear threshold Drainage System

For 65ARTDi, 65TRTDi, 65PSTDi

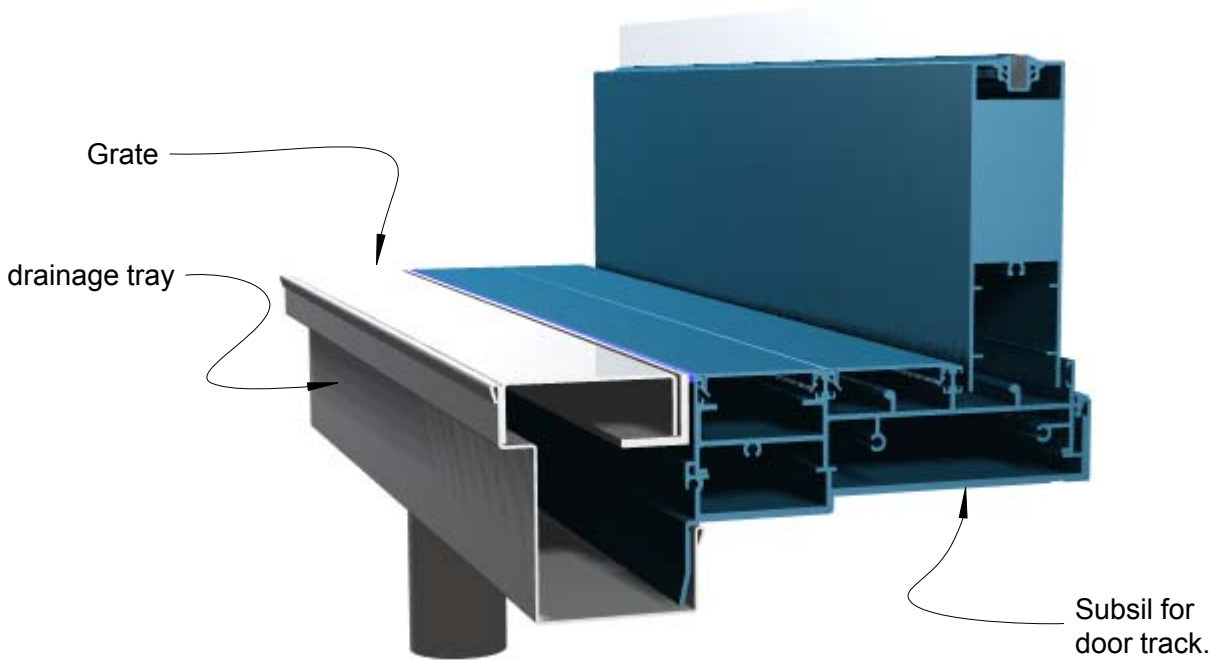

- \* The entire door track and 65TDi are set in above and separate to waterproofing. Therefore waterproofing must be completed first.
- \* Install the door track sub-sil.
- \* When installing the 65TDi, the tray needs to be slightly deeper than the lowest part of the Sub-sil.
- \* Standard installation squence generally has the door track sub-sil in place before the drain. Therefore the tray may need to be slightly deeper than lowest part of the sub-sil to allow the drain channel to slide underneath the sub-sil.
- \* Refer to;  
AS1428 Design for Access and Mobility  
AS4654 for waterproofing
- \* Lengths longer than 3m have saddle joins in the channel.  
Use Sika 11FC and primer 215 to seal the saddle joins.

